

**TOYOTA PRIUS**  
**VEHICLE IDENTIFICATION NUMBER CODING SYSTEM**

## Constitution

\*: Described in each section below

Section	1	2	3	4			
	*	*	Check Digit	Model Year	*	Serial Number	
	1 2 3	4 5 6 7 8	9	10	11	12 13 14 15 16 17	

Section 1: Geographic Area & Country, Manufacturer, and Type of Vehicle

1st - 3rd Digits	Code	Geographic Area & Country	Manufacturer	Type
	JTD	Asia, Japan	Toyota Motor Corporation	Passenger Car

Section 2: Vehicle Description Section

		Code	Description
4th Digit	Body Type	K	5Door Sedan, Two-Wheel Drive
		L	5Door Sedan, Four-Wheel Drive
5th Digit	Engine Type	9	2ZR-FXE, 1NM+1MM GASOLINE(HYBRID), PORT, L4, 1.8L, 96HP
		A	2ZR-FXE, 1NM GASOLINE(HYBRID), PORT, L4, 1.8L, 96HP
6th Digit	Restraint Devices & their Locations	R	Seat Belt: All seats Frontal Air Bag: Driver & Passenger seats Curtain Shield Airbag: All Rows Side Airbag: 1st Row Knee Airbag: Driver seat only Cushion Airbag: Passenger seat only
7th Digit	Series	F	ZVW51L ZVW55L
8th Digit	Line & Make	U	TOYOTA PRIUS

Section 4: Vehicle Plant of Manufacture

		Code	Description
11th Digit	Plant of Manufacture	3	Tsutsumi Plant, Toyota Motor Corp.